


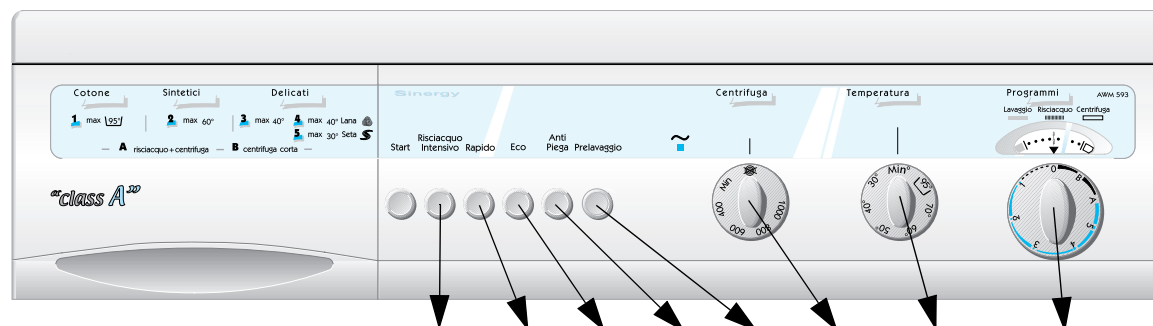








-  **Wool**
-  **Silk**
-  **Indicator light**



Programme	Type of wash	Max Load kg	Detergents and Additives				Special options that can be selected = *					Spin Knob (Max)	Thermostat Knob °C	Programme Selector knob	Programme duration (minutes) ²	Notes
			Pre wash 	Wash 	Bleaching 	Fabric Softener 	Intensive rinse	Quick wash	Energy save	Rinse hold	Pre-wash					
Cotton	Average or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts etc.	Normal 5.0 Quick wash 3.0	*	Yes	*	*	*	*	*	*	*	1000	Max. 95° Quick wash Max. 60°	1	115 60	Also select the "Prewash" function in the case of a heavily soiled wash. When you select the "Quick wash" function the "Intensive Rinse", "Energy Save" and "Prewash" functions cannot be selected.
Synthetic	Average or lightly soiled blouses, shirts, etc. in polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or similar blends.	Normal 2.5 Quick wash 1.5	*	Yes	*	*	*	*	*	*	*	900 ¹	Max. 60° Quick wash Max. 60°	2	80 45	When you select the "Quick wash" function the "Intensive Rinse", "Energy Save" and "Prewash" functions cannot be selected.
Delicate	Delicate curtains, dresses, skirts, shirts, etc.	1.5	*	Yes	*	*	—	—	—	*	*	900 ¹	Max. 40°	3	40	—
Wool 	Only machine washable woollens with pure new wool label.	1.0	—	Yes	—	*	—	—	—	*	—	900 ¹	Max. 40°	4	35	If you select "Rinse Hold", don't leave garments to soak for too long.
Silk 	Machine washable silk and viscose articles.	1.0	—	Yes	—	*	—	—	—	*	—		Max. 30°	5	35	No spin, drain only. If you select "Rinse Hold", don't leave garments to soak for too long.
Rinse + Spin	—	5.0	—	—	—	*	—	—	—	*	—	1000	—	A	—	With this programme you can add bleach, fabric softener or starch. The programme ends with an intensive spin cycle.
Gentle Spin	—	1.0	—	—	—	—	—	—	—	—	—	900 ¹	—	B	—	This programme provides a gentle spin cycle, the same as the spin cycle in the "Wool" programme.

¹ The spin speed is reduced to a maximum of 900 rpm. so as not to damage the laundry.

² Programme duration figures are valid for a programme with maximum temperature wash but without special options.

Programme selector knob	Programme	Thermostat knob (°C)	Max. Load (kg)	Options	Water (l)	Energy (kWh)	Approx. programme duration (minutes)
1	Cotton	95	5.0	—	62	1.80	115
1	Cotton	60	5.0	—	56	0.56	115
1	Cotton	60	5.0	Energy save	56	0.60	105
1	Cotton	40	5.0	—	56	0.55	105
1	Cotton	30	3.0	Quick wash	35	0.30	40
2	Synthetic	60	2.5	—	60	0.80	80
2	Synthetic	40	2.5	—	54	0.40	70
2	Synthetic	30	1.5	Quick wash	35	0.20	35
3	Delicate	40	1.5	—	60	0.30	40
4	Wool	40	1.0	—	60	0.30	35
5	Silk	30	1.0	—	60	0.30	35

- Programmes with Prewash last approx. 15 minutes longer.
- Consumption data was measured in normal conditions in compliance with Standard IEC 60 456.
- Consumption values in the home may vary with respect to the values in the table depending on the water supply pressure and temperature, the load and the type of laundry washed.

PROGRAMME SELECTION

1. Open the tap.
2. Set the **programme selector knob** to the desired programme. The indicator lights up, indicating that the washing machine is on.
3. Set the **thermostat knob** to the desired temperature.
4. Set the **spin selector knob** to the desired speed.
5. Special options can be selected
6. Hold down the **“Start”** button for about one second, until the disk above the programme knob moves.

SPECIAL FUNCTIONS THAT CAN BE SELECTED:

Intensive rinse

- Suitable to improve rinsing (e.g. for people with more sensitive skin or for baby linen).
- The rinse cycle is longer and the water level increases to improve rinsing.

Quick wash /

- Suitable for small loads of averagely soiled laundry only.
- The duration of the cycle is reduced for quick and economical washes.

Energy save

For lightly soiled garments the maximum temperature is reduced (from 90° C to 60° C and from 60° C to 40° C) and the cycle duration is longer obtaining the same results.

Rinse hold

- Particularly suitable for “Delicate” or “Synthetic” programmes, to reduce garment creasing caused by spinning.
- The cycle is stopped and the laundry remains in the last rinse water.

Release the button to stop the programme.

Prewash

- Select in case of heavy soil (e.g. sand, grease, oil,...).
- An additional cycle lasting approx. 15 minutes that is carried out to improve washing results.

TO RESELECT A PROGRAMME WHEN A CYCLE HAS ALREADY BEGUN:

1. Hold down the **“Start”** button for at least 5 seconds, until the disk above the programme knob moves;
2. Wait until the programme indicator moves to **“STOP”**.
3. Select the new programme;
4. Hold down the **“Start”** button for about one second, until the disk above the programme knob moves.

PROGRAMME COMPLETION

1. The programme ends when the programme indicator turns to **“STOP”**. Wait until this happens before opening the door.
2. Set the programme selector knob to **“O”**. The indicator light will go out.
3. Take out the laundry after having opened the door and switched off the machine.
4. Close the tap and leave the door ajar to allow the drum to dry out.

NOTES AND INDICATIONS FOR USE

• WATER LEVEL

It may not be visible (in case of a cycle without pre-wash) as the cycle is optimized for a minimum water consumption without compromising washing results.

• SPIN SPEED CONTROL

Spin speed may be reduced automatically or may even be excluded in case of small loads containing highly absorbing garments (e.g. bathrobes, towels,...). This control avoids cloth damage and excessive vibrations and consequent noise produced by the machine due to load unbalance: by selecting high spin speeds the noise level increases.